



CALIFONE 3066USB HEADSET SOUND LEVEL SETTINGS FOR MICROSOFT WINDOWS XP

For NativeAccent® by Carnegie Speech


1. **Right-click the speaker icon** in System Tray and select “properties”

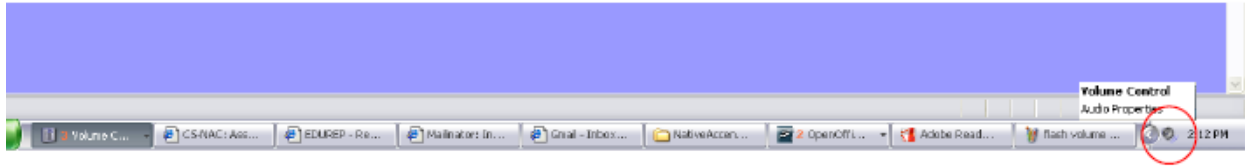

2. **Set sound playback** for C-Media USB Audio Device as shown

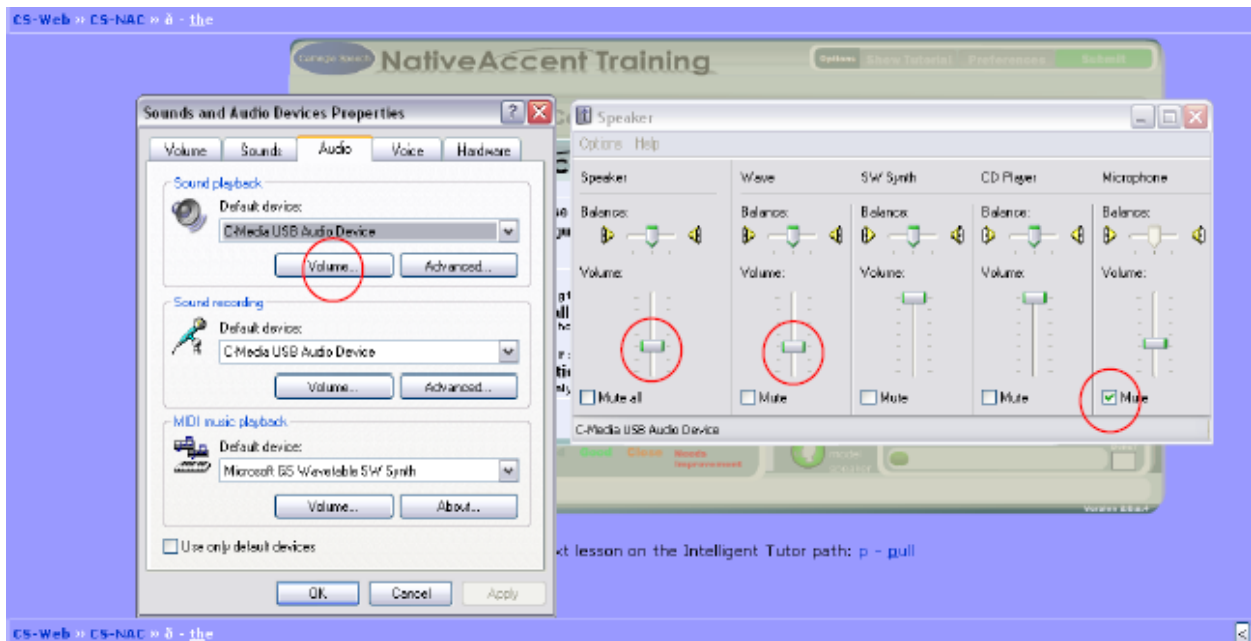


3. **Adjust the Sound Recording Volume** for C-Media USB Audio Device as shown

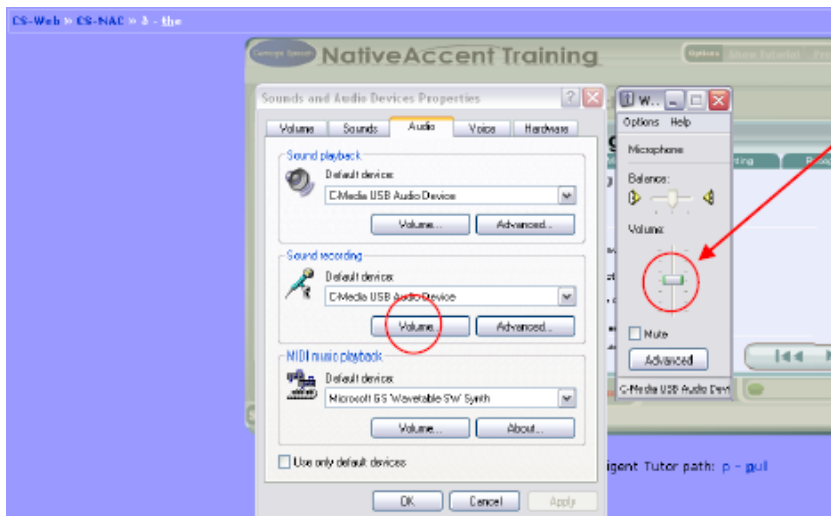

4. **Adjust the microphone position** to about 2 fingers width from the mouth and slightly below the lower lip, so that sounds from air blowing across the pickup do not register.



5. **Right Click in Adobe FLASH® window**, select the microphone icon and speak into the microphone at normal speaking levels. Adjust the RECORD VOLUME so that the volume meter consistently registers in the GREEN when speaking at normal volume. The meter should NEVER register in the RED zone.

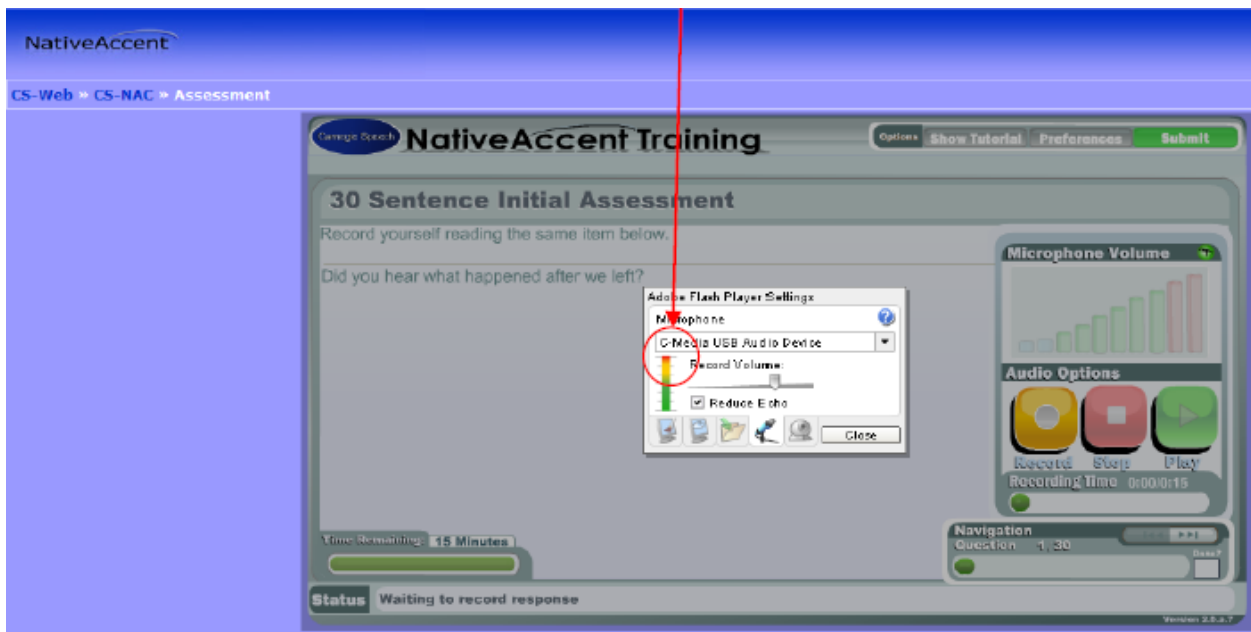

During the NativeAccent Tutorial, if the background noise test reports too much background noise, lower the microphone volume and move the pickup closer to the mouth (making sure that the flow of air when speaking does not affect the sound). **Your first recording will reveal if the volume is set correctly.**

